

# DMX CONTROLLER/DMX-192C-12V

## MAIN FEATURES

1. 192DMX Channels.
2. 30 Banks each composed or8 programmable scenes.
3. 8 Fades adjusting output level.
4. Built-in Microphone.
5. AUTO mode is controlled by TAP SYNC and SPEED controlled.
6. MIDI control through MIDI interface.
7. 4 digits LED display.
8. Blackout master controlled by Manual or Remote.
9. CHASE programming and CHASE running, manual control and remote control.
10. Fade Time control.
11. DMX polarity selects.

## TECHNICAL SPECIFICATION


1. Working Volt.: DC9~12V,300mA min
2. Input Volt.: AC230V~50Hz (AC 120V~60Hz)
3. Dimensions: 482X132X73mm
4. Weight: 2.5Kg

## OPERATING INSTRUCTIONS

### 1. GENERAL DESCRIPTIONS:

- I. There is 192 DMX channel adjusting output level in every scene.
- II. 8 scenes are available to be programmed for each bank. When scene running all scenes of one bank will be executed continuously in a cycle.
- III. Select desired bank using UP and DOWN button, Also you can select desired bank using MIDI signals through MIDI interface, there are totally 30 banks, once only one can be chose
- IV. Scenes can be executed automatically, and the duration is dependent on TAP SYNC, scenes are executed under music triggering or NOTE triggering also press a scene buttons by hand to run scenes
- V. There are total 6 chases, each contains 240 scenes.

### 2. CONTROLS& FUNCTIONS

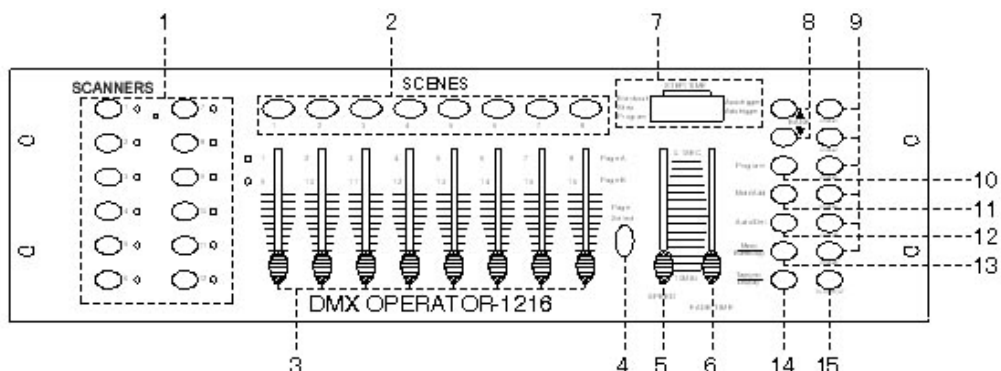

#### 1, scanners (1-12)

Scanners	Channel	Fade control	LED
1	1-16	OFF	OFF
2	17-32	OFF	OFF

3	33-48	OFF	OFF
4	49-64	OFF	OFF
5	65-80	OFF	OFF
6	81-96	OFF	OFF
7	97-112	OFF	OFF
8	113-128	OFF	OFF
9	129-144	OFF	OFF
10	145-160	OFF	OFF
11	10-176	OFF	OFF
12	177-192	OFF	OFF

Scanners	Channel	Fade control	LED
1	1-16	ON	ON
2	17-32	ON	ON
3	33-48	ON	ON
4	49-64	ON	ON
5	65-80	ON	ON
6	81-96	ON	ON
7	97-112	ON	ON
8	113-128	ON	ON
9	129-144	ON	ON
10	145-160	ON	ON
11	10-176	ON	ON
12	177-192	ON	ON

Press desired scanner, corresponding LED is lit, and appropriate channels is enabled to be adjusted, when scenes are running, if fades control is OFF, channel output level is not controlled by the fades, if fades control is ON, channel 8-output level is controlled by the fades.

**2、 Scene button**

Press one scene button to run scene or to store scene, and the second digit of LCD DISPLAY shows scenes 1-8

**3、 fade (18)**

Slide the fades to adjust the output level or DMX channel from 0 to FF. (255).

**4、 PAGE SELECT**

press to select page A to page B

**5、 SPEED SLIDER**

Move the slider to adjust chasing speed.

**6、 FADE TIME SLIDER**

Move the slider to adjust FADE TIME.

**7、 LED DISPLAY**

**8、 BANK button (↑or↓)**

Press UP or DOWN to increase or decrease Bank, the third and fourth digit of LED DISPLAY shows BANK NO. (01-30).

**9、 CHASE 1-CHASE 6**

Select desired CHASE to be programmed or run CHASE.

**10、 PROGRAM**

Turn the power on, it is in MANUAL RUN mode, press PROGRAM for 2 seconds, corresponding LED blinks, SCENE and CHASE are ready to be programmed, press PROGRAM once more to return to RUN mode. Corresponding LED goes out.

**11、 MIDI/ADD**

a、 Press MIDI key when running the third and fourth digit of LED flash, select MIDI channel using UP or DOWN, press MIDI key once more or any other key excluding UP or DOWN to end the MIDI channel setting

b、 Press this key to make programs when in PROGRAM mode.

## 12、 AUTO/DEL

a、 In RUN mode, press Auto/Del, corresponding LED is ON which indicates it is AUTO RUN mode, press once more to withdraw MUSIC mode, corresponding LED goes out.

b、 Press this key to make Scene and chase program when in PROGRAM mode.

## 13、 MUSIC/BANK COPY

a、 In RUN mode, press this key, corresponding LED is ON, which indicates it is in MUSIC mode, Press once more to withdraw MUSIC mode, corresponding LED goes out.

b、 Press this key to make Scene and chase program when in PROGRAM mode.


## 14、 TAP SYNC/DISPLAY

a、 In AUTO RUN mode, running speed of scene is dependent on the interval of last Two pressing of TAP SYNC/DISPLAY, Max. 10 minutes.

b、 In PROGRAM mode, select display between STEP and BANK, in other mode, select display between 00-225 and 0%-100%.

## 15、 BLACKOUT

Press this key to disable channel, output, but not any other functions. Press once withdraw Blackout mode.

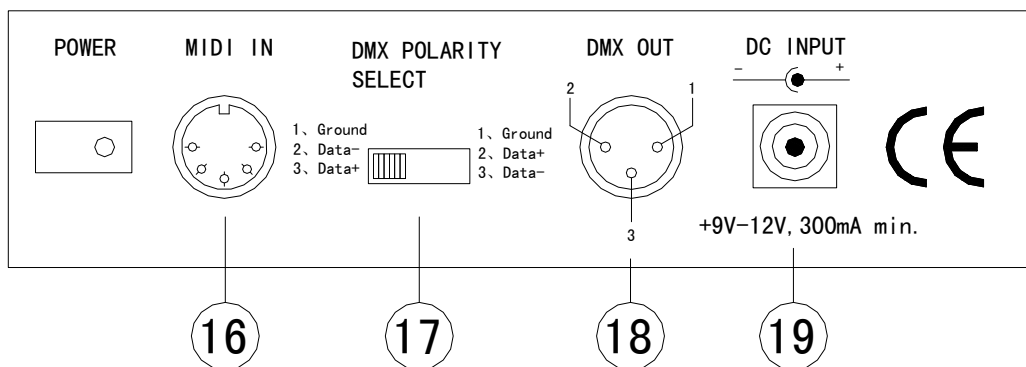

## 16、 MIDI IN

Use to receive MIDI data.

## 17、 DMX POLARITY SELECT

Select the polarity of DMX output.

## 18、 DMX OUT

Use to output DMX data.

## 19、 DC INPUT

DC 9V-12V, 300mA MIN.

# PROGRAMMING FOR SCENES

Press PROGRAM for 3 second, appropriate LED blink, which indicates it in PROGRAM mode

## 1. SECNE PROGRAMMING

- I . Press SCANNER key to select DMX channel composed of 8 channels.
- II . Select different channel to control several devices at the same time.
- III. Adjust appropriate fades to select desired output level, than turn off fade.
- IV. Select and adjust output level continuously until all devices are set.

- V. Press MIDI/ADD
  - VI. Select desired bank using UP or DOWN.
  - VII. Press SCENE to store this SCENE.
2. **SCENE EDITING**
    - I. Select desired scene of bank.
    - II. Make program of scene to meet the requirement of device.
    - III. Press MIDI/ADD.
    - IV. Press scene to store this scanner.
  3. **SCANNER COPY**
    - I. If a scanner is set, press and hold the SCANNER first.
    - II. Press the SCANNER to copy to, then the SCANNER is copied to another SCANNER.
  4. **SCENE COPY**
    - I. Select desired SCENE.
    - II. Press MIDE/ADD once.
    - III. Select one bank. Then press the scene to copy to.
  5. **DELETE SCENE(DMX channel incorporated with this SCENE are set to 0)**
    - I. Select desired scene.
    - II. While pressing and holding AUTO/DEL, Press scene required to be deleted .
  6. **CLEAN ALL SCENE (ALL DMX channel are set 0.)**
    - I. Press PROGRAM+DOWN while turning power off.
    - II. Turn the power on.
  7. **COPY BANK**
    - I. Select desired bank.
    - II. Press MIDE/ADD.
    - III. Select the bank to copy to.
    - IV. Press MSIC/BANKCOPY.
  8. **DELETE A BANL**

Select the bank to be deleted, press Auto/DEL + Music/Bank copy.

## **PROGRAMMING FOR CHASES**

Press PROGRAM. Corresponding LED flashes, which indicates it is in PROGRAM mode.

1. **MAKE PROGRAM OF SCENE IN CHAS**
  - I. There are up to 240 scenes in a CHASE.
  - II. Scene are run in the programmed order First programming, first running.
  - III. Select a CHASE who contains programmed scene.
  - IV. Select scene of bank.
  - V. Press MIDI/ADD.
2. **COPY A BANK TO CHASE**

Select a bank, press MUSIC/BANK COPY, and press MIDI/ADD, Then the scenes of the bank are copied to the CHASE.
3. **CHASE EDITING**

Add a STEP IN CHASE

  - a. Select desired LCD display.
  - b. Press TAP SYNC/DISPLAY. the LCD shows the CHASE and its STEP, Press TAP SYNC/DISPLAY once, the LCD shows the SCENE and BANK.
  - c. Add a STEP in CHASE.
  - d. Presses TAP SYNC/DISPLAY, the LCD shows the CHASE and its STEP If it has made program

till the 15th step. Select the 9th using UP or DOWN, press MIDI/ADD, the CHASE is maintained and the STEP turns to 10th STEP Select desired SCENE sing UP or DOWN, Press MIDI/REC, then the new 10th STEP is added to SCENE, the previous 10th STEP turns to the new 11th STEP, the previous 11th STEP turns to the new 12th STEP, and so on.

e. **Delete a STEP in CHASE**

Select desired STEP and then press AUTO/DEL.

For example, select the 10th STEP using UP or DOWN, press AUTO/DEL, then the 10th STEP is deleted, the previous 11th STEP turns to the 10th STEP, the previous 12th STEP and so on.

**4. DELETE A CHASE**

I. Select desired CHASE.

II. Press desired CHASE while holding Auto/DEL.

**5. CLEAN ALL CHASE(ALL SCENES are still available)**

I. Press DOWN +Auto/DEL while turning power off.

II. Turn the power on.

## **RUNNING SCENES**

- Turn the power on; it is in MANUAL RUN mode, When in PROGRAM mode, press PROGRAM for 2 seconds, PROGRAM LED goes out, it enters MANUAL mode.
- If there is not any scenes having been programmed in a bank, the scene can't be run, only the SCENES having been programmed are executed.
- If the fades is set to OFF Scene will execute channel program setting.

**1. MANUAL RUN**

I. Extinguish AUTO triggered LED and MUSIC triggered LED.

II. Select a bank (using ↑ of ↑,MIDI signals through MIDI interface).

III. Press scene to run scene.

IV. Run scene-using MIDL.

**2. AUTO RUN**

I. Press AUTO/DEL, corresponding LED is ON.

II. Press TAP SYNC/DISPLAY, Press it once more some time, the interval between two pressing is assigned to the speed of AUTO RUN, the maximum limit is 10 minutes, If there are many pressings more than twice, the last two pressing are designated.

III. Select desired bank using UP or DOWN via MIDI signals.

IV. Press Auto/DEL once more to withdraw ATO RN mode.

**3. MUSIC RUN**

I. Press music/Bank copy, corresponding indicator lights, scene run is engaged into MUSIC RUN.

II. Select desired bank, using UP or DOWN or via MIDI signals.

III. Press music/bank copy once more to withdraw MUSIC RUN.

**4. MIDI RUN**

Select bank to run scenes using MIDI whenever it is in MANUAL RUN, AUTO RUN or MUSIC RUN.

**5. CHASE RUN**

I. CHASE RUN requires making programs, when running CHASE, Scene will be step auto matching.

II. CHASE RUN includes MANUAL RUN, AUTO RUN, ATDIO RUNS, and MIDI RUN.

III. Either one CHASE more can be run in the order of selection.

IV. Press CHASE Corresponding indicator lights, which indicates it, is in CHASE RUN.

**6. FADE TIME CONTROL**

Move the slider to adjust FADE TIME, Output varies accordingly.

## MIDI CHANNEL SETTING

### 1. MIDI channel setting

- I . Press MIDI, the third and fourth digits of LED blink, selects MIDI channel setting.
- II . Press MIDI one more to end MIDI channel setting Also you can press any other key except UP and DOWN or move the fades to end MIDI channel setting.

### 2. MIDI RUNNING

NOTE ON: Receive NOTE ON signals to execute corresponding function.

BANK	NOTE NUMBER	FUNCTION
BANK1	00	TURN ON TURN OFF CENE1
	01	TURN ON TURN OFFENE2
	02	TURN ON TURN OFF SCENE3
	03	TURN ON TURN OFF SCENE4
	04	TURN ON TURN OFF SCENE5
	05	TURN ON TURN OFF SCENE6
	06	TURN ON TURN OFF SCENE7
	07	TURN ON TURN OFF SCENE8
BANK2	08	TURN ON TURN OFF SCENE1
	09	TURN ON TURN OFF SCENE2
	10	TURN ON TURN OFF SCENE3
	"	"
BANK15	112	TURN ON TURN OFF SCENE1
	113	TURN ON TURN OFF SCENE2
	114	TURN ON TURN OFF SCENE3
	115	TURN ON TURN OFF SCENE4
	116	TURN ON TURN OFF SCENE5
	117	TURN ON TURN OFF SCENE6
	118	TURN ON TURN OFF SCENE7
	119	TURN ON TURN OFF SCENE8
CHASE	120	TURN ON TURN OFF CHASE1
	121	TURN ON TURN OFF CHASE1
	122	TURN ON TURN OFF CHASE2
	123	TURN ON TURN OFF CHASE3
	124	TURN ON TURN OFF CHASE5
	125	TURN ON TURN OFF CHASE6
	126	BACKOUT